

# Wells-Gardner® Monitor Color Settings

If the colors on your Wells-Gardner monitor shift dramatically to one color, follow the steps below to change the color settings. (For example, the image may appear to be covered by a green haze.)

Refer to the tables that follow for optimal settings for various games.

1. Using the monitor remote control board, press and hold the **DOWN** and **SEL** buttons for 7 seconds. The **FACTORY MODE** menu will open.
2. Press the **DOWN** button repeatedly to select **COLOR GAIN**, and then press **SEL**. The **GAIN MODE** menu will open.
3. With **GAIN MODE** highlighted, press **UP** or **DOWN** to switch to the **BIAS MODE** or **OSD MODE** menus.
4. To change items in the MODE menus, press **SEL** repeatedly to move through the menu items. Press **UP** or **DOWN** to change the value of a highlighted item.
5. When finished, press **MODE** repeatedly to exit from the monitor settings menus.

EA SPORTS™ PGA TOUR® Golf		
GAIN MODE	BIAS MODE	OSD MODE
SB 190	CB 75	OC 75
R 121	R 197	
G 113	G 117	
B 170	B 141	

EA SPORTS™ MADDEN NFL® FOOTBALL		
GAIN MODE	BIAS MODE	OSD MODE
SB 200	CB 75	OC 75
R 121	R 127	
G 118	G 148	
B 107	B 180	

Need for Speed™		
GAIN MODE	BIAS MODE	OSD MODE
SB 166	CB 75	OC 75
R 151	R 128	
G 137	G 136	
B 195	B 170	

Aliens™ Extermination (Standard Cabinet Only)		
GAIN MODE	BIAS MODE	OSD MODE
SB 190	CB 75	OC 75
R 132	R 168	
G 115	G 150	
B 109	B 172	