

PRODUCT: Six-Gun Select, Fast Draw, and Last Bounty Hunter


BULLETIN: SB-005

ISSUE: Distorted Sound from 4-Ohm Speakers

DATE: 5/12/2004

Some cabinets may experience distorted sound ("screeching") at higher volume levels. This problem affects models that have 4-Ohm speakers installed. Perform this procedure only as directed by GLOBAL VR Technical Support.

1. Turn the cabinet power OFF. Open the rear door of the cabinet to get access to the speakers. The speaker rating will be marked on the back of each speaker. Verify that you have "4-Ohm" speakers.
2. Open the coin door to gain access to the Amp card (marked "HAPP KIOSK AMP"). See the figure below.

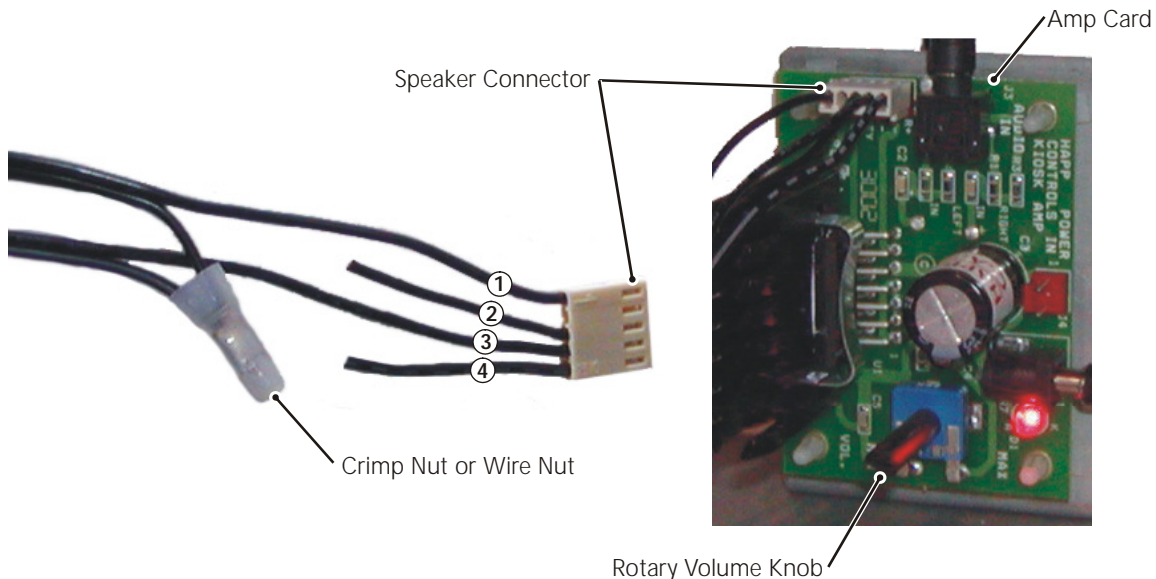

3. Turn the rotary volume knob all the way down (counter-clockwise). Unplug the 4-conductor speaker connector from the Amp card. When unplugging, pull on the connector, not the wires.
4. Clip the #2 wire (-left) and the #4 wire (+right) about 1" from the plug. This will allow you to reverse the fix if necessary.
5. Strip about 1/4" of insulation from the non-plug end of the clipped wires. Use a suitable method (wire nut or crimp nut) to connect the wires together. Do not use electrical tape.
6. Plug the speaker connector back into the Amp card.
7. Turn the cabinet power back ON.
8. After the game launches, adjust the rotary volume knob until you are satisfied with the sound level. If you do not hear sound, check that you have clipped and joined the correct wires, and check that the connector is seated properly on the card.