

# Installing the FX-5700-256 Video Card

Document Part #: 040-0071-01

**IMPORTANT: You must be running EA SPORTS™ PGA TOUR® GOLF CHAMPIONSHIP EDITION III, with Game Software version 2.2.2.0, to use the FX-5700-256 video card.**

If your cabinet is running an earlier version of EA SPORTS™ PGA TOUR® GOLF, you must contact your distributor to upgrade your software.

**This document applies only to computers with the DFI-NB32-SL motherboard** (see diagram below). Systems with the PS-35 motherboard (horizontal audio ports) ship with the FX-5700-256 video card installed.

**Important: Any time you restore the operating system with the Emergency Recovery Disk after installing the 5700-256 video card, you will have to follow steps 3—9 below. You may wish to place a label on the computer or Recovery CD to remind you of this required change in procedure.**

1. Install the 5700-256 video card.
2. If your system is running Game Software Version 2.2.2.0, reboot the computer and play a hole or two to make sure everything is working properly. If your system is running Game Software Version 2.2.0.0, perform the steps below to install Version 2.2.2.0.

3. Connect a keyboard to the computer keyboard port (the purple port).

**Caution: DO NOT touch the keyboard except as instructed in this document. Ignore all screens that prompt you to press a key. The software will install automatically.**

4. Insert the following CD in the drive and power cycle the computer: **Emergency Recovery Disk: Version 08.26.2003, OS XPE Nvidia Geforce 4 (Part # 050-0024-01, Rev B).**
5. When prompted, remove the CD and power cycle the computer. When the Found New Hardware Wizard screen appears, press the **Tab** key to select **Cancel**, and then press **Enter**.
6. When prompted to restart, power cycle the computer. After reboot, the Found New Hardware Wizard screen will appear again. Press **Tab** to select **Cancel**, and then press **Enter**.
7. Disconnect the keyboard from the computer.
8. Insert **Game Disk 1 of 2 (Part # 050-0054-01)** in the CD drive.
9. The disk will run, and a series of processing screens will appear. When the computer ejects the CD, insert **Game Disk 2 of 2**. When the installation finishes, the computer will reboot and after a few minutes the attract movie will start. Remove the CD.
10. Start a game and play a hole or two to verify proper operation.

	<b>Original Video Card:</b> GeForce 4 TI 4200-128MB-AGP <b>Replacement Video Card:</b> 3Dforce FX-5700-256
	Use <i>THIS</i> Emergency Recovery Disk <b>Emergency Recovery Disk: Version 08.26.2003, OS XPE Nvidia Geforce 4 (Part # 050-0024-01, Rev B)</b>
	<b>Use THIS Game Disk Version:</b> Championship III: 2.2.2.0 (Part # 050-0054-01) (Do not use original game disk version: 2.2.0.0. It does not work with the FX-5700-256 video card.)
	<b>Additional Information</b> <b>Motherboard:</b> DFI-NB32-SL <b>Case Color:</b> White or Black