


PRODUCT: Breeders' Cup – Tournament Edition

BULLETIN: SB-009

ISSUE: Game gives away 1 Credit when Rebooted

DATE: 07-20-2005

Coin Comparitor Settings – Game gives away 1 Credit when Rebooted

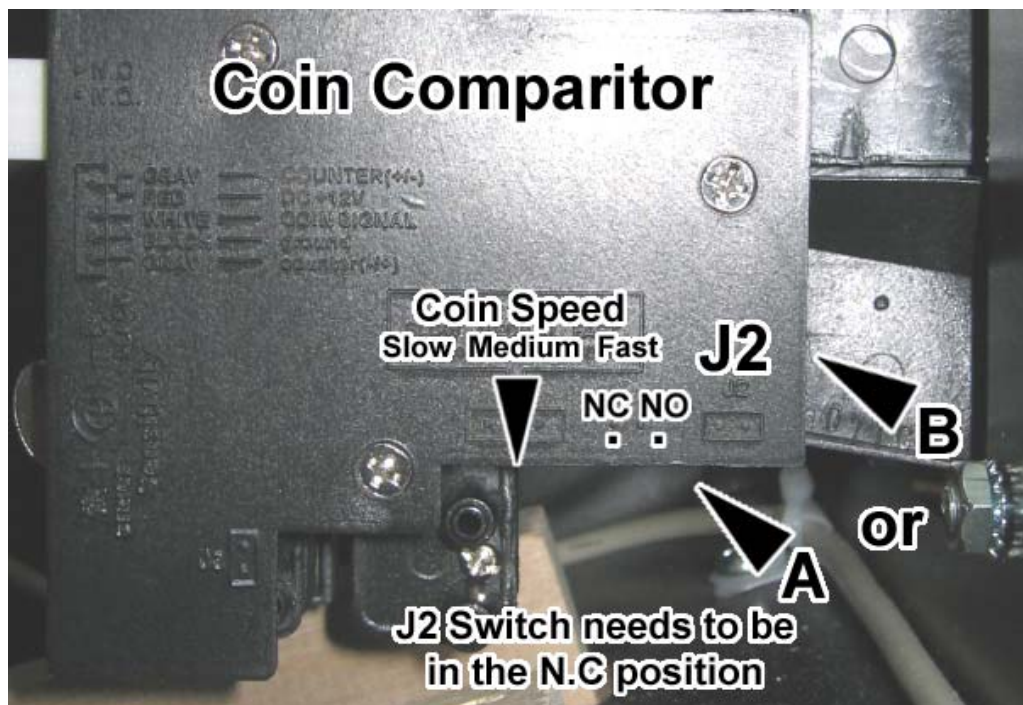

If you find that your Breeders Cup cabinet is giving away one credit when the cabinet is powered ON or rebooted then you need to adjust the J2 switch on the Coin Comparitor. There are 2 different switch located on the Coin Comparitor; the Coin Speed Switch has 3 setting, the J2 switch has only 2 settings please make sure you are adjusting the correct switch on the Coin Comparitor

Open up the cabinets control panel and on the left side of the Coin Comparitor are the instructions for the J2 Switch. The J2 Switch needs to be in the N.O or Normally Open position so the Coin Comparitor will not credit the cabinet when powered ON or rebooted. The J2 Switch can be found in 2 different spots A or B on the Coin Comparitor. When the J2 switch is located at position A the N.O switch position is towards the front of the cabinet. When the J2 switch is located at position B the N.C. switch position is towards the top of the cabinet. Adjust the J2 switch into the N.O. position on the Coin Comparitor and reboot the cabinet to verify the problem has been resolved.