


# BIOS Settings for PS35-BL Rev. G Motherboard

If you are comfortable using the CMOS Setup Utility, connect a keyboard to the computer and press the **DEL** key during boot to run the Utility. Select **Load Optimized Defaults** from the **Main** Menu first, and then check all of the settings shown in the table below. For more help, refer to the detailed instructions that follow.


Menu	Item	Submenu (if Applicable)	Setting
Main	Load Optimized Defaults		<i>(Not applicable)</i>
Standard CMOS Features	Date		<i>(Set current date)</i>
	Time		<i>(Set to local time)</i>
	Drive A		None
	Halt On		No Errors
Advanced BIOS Features	Hard Disk boot Priority		WDC WD400BB <i>(the Hard Disk)</i>
	First Boot Device		CDROM
	Second Boot Device		Hard Disk
	Third Boot Device		Disabled
Advanced Chipset Features	DRAM R/W Timing		Fast
Integrated Peripherals	Onboard Devices	USB Controller	All Enabled
		USB Keyboard Support	Enabled
Power Management Setup	PWR Loss Resume State		Turn On

**Important:** Your screens may not look exactly like the screens in the pictures that follow, and some settings in the pictures may be different from your system. **Do not change any settings that are not specifically described in this document.**

1. Press the **DEL** key during boot. The CMOS Setup Utility Main Menu will appear:
2. Use the Arrow keys ( $\uparrow$  $\downarrow$  $\rightarrow$  $\leftarrow$ ) to select **Load Optimized Defaults**, and press **Enter**.  
Press **Y** and **Enter** when prompted to confirm the change.

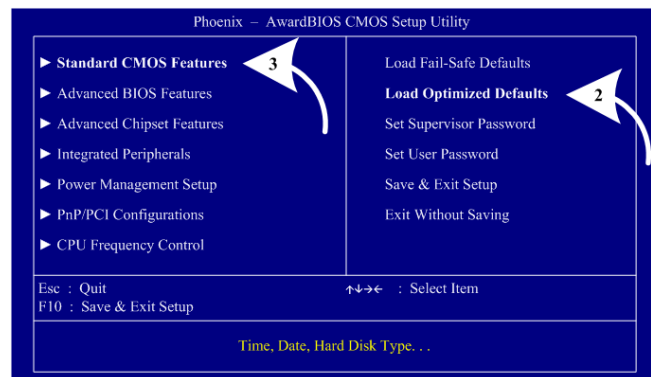


- Use the Arrow keys to highlight **Standard CMOS Features**, and then press **Enter**. A screen similar to the following will appear:
- Use the Arrow keys to select **Date**; the month will be highlighted. Use the **Page Up** and **Page Down** keys to set the month. Press the Right Arrow (→) key to move to the day, and set it the same way. Repeat for the year.

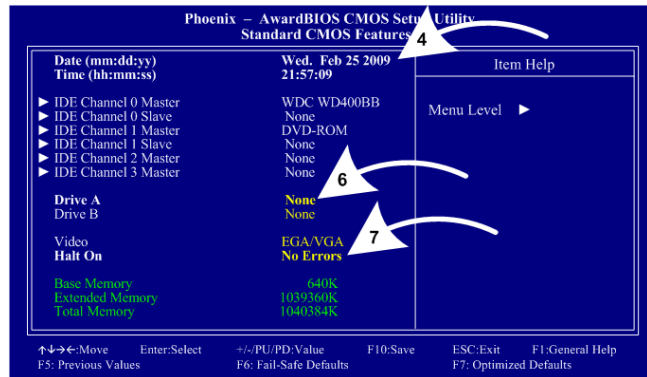

- Use the Arrow keys to select **Time**. Set the local time the same way you set the date.
- Use the Arrow keys to highlight the setting for **Drive A**. Use the **Page Up** and **Page Down** keys to change the setting to **None**.
- Use the Arrow keys to highlight the setting for **Halt On**. Use the **Page Up** and **Page Down** keys to change the setting to **No Errors**.

Press **ESC** to go back to the Main Menu.

- Now use the Arrow keys to highlight **Advanced BIOS Features** and press **Enter**. A screen similar to the following will appear:
- Use the Arrow keys to highlight the setting for **Hard Disk Boot Priority** and press **Enter**. On the submenu, use the **Page Up** and **Page Down** keys to move **WDC WD400BB** (the Hard Disk) to position **1** (if it's not already there).

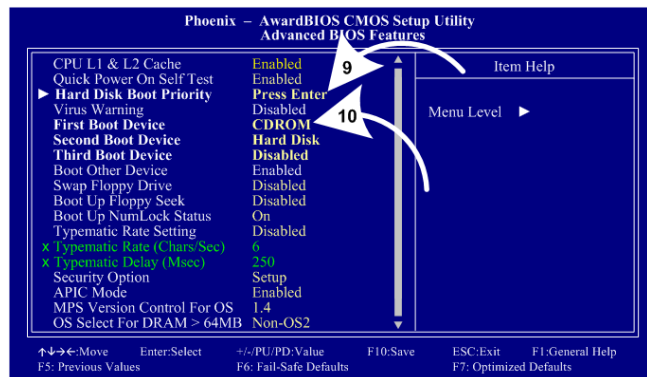

- Use the Arrow keys to highlight the setting for **First Boot Device**. Use the **Page Up** and **Page Down** keys to change the setting to **CDROM**.
- Set **Second Boot Device** to **Hard Disk** and **Third Boot Device** to **Disabled** the same way.


Press **ESC** to go back to the Main Menu.

12. Now use the Arrow keys to highlight **Advanced Chipset Features** and press **Enter**. A screen similar to the following will appear:

13. Use the Arrow keys to highlight the setting for **Dram R/W Timing** (if listed).

Use the **Page Up** and **Page Down** keys to change the setting to **Fast**.

Press **ESC** to go back to the Main Menu.

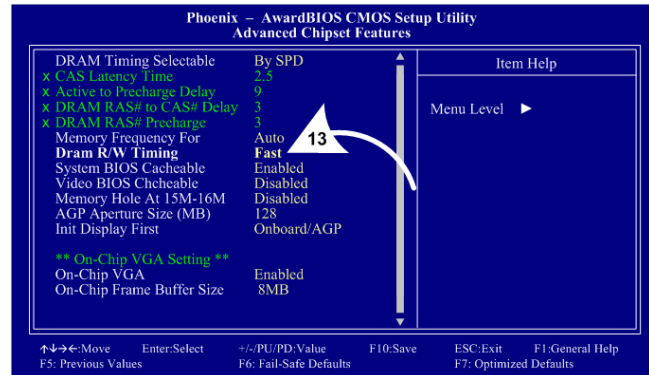


14. Now use the Arrow keys to highlight **Integrated Peripherals** and press **Enter**. A screen similar to the following will appear:

15. Use the Arrow keys to highlight the setting for **Onboard Device** and press **Enter**.

16. On the submenu, use the **Page Up** and **Page Down** keys to change the setting for **USB Controller** to **All Enabled**.

Change **USB Keyboard Support** to **Enabled** the same way.


17. Press **ESC** twice to go back to the Main Menu.

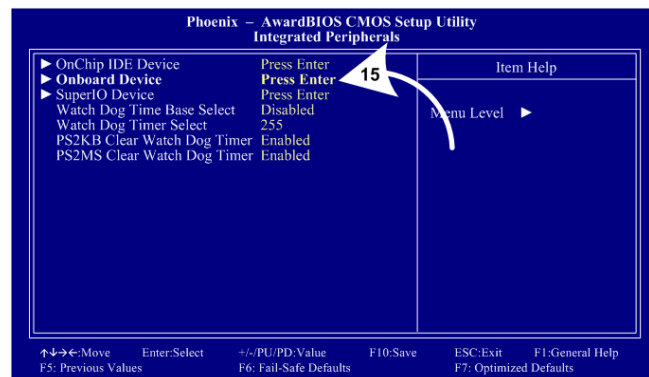

18. Now use the Arrow keys to highlight **Power Management Setup** and press **Enter**. A screen similar to the following will appear:

19. Use the Arrow keys to highlight the setting for **PWR Lost Resume State**.

Use the **Page Up** and **Page Down** keys to change the setting to **Turn On**.

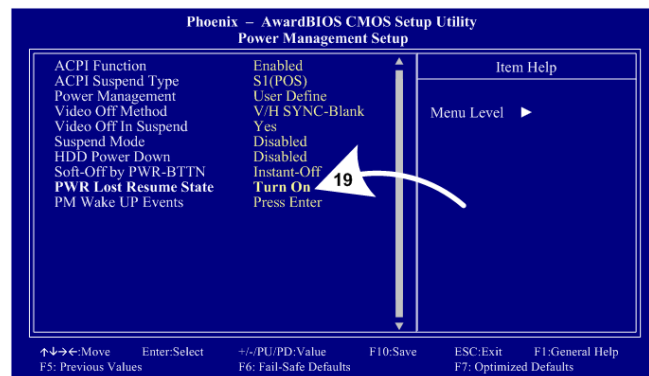

20. Now that all settings are correct, press **F10**. The following prompt will appear:

Save to CMOS and EXIT (Y/N)? Y

21. Make sure "Y" shows at the end of the prompt (use the arrow keys to select, if necessary), and press **Enter** to save the settings and exit.